

7) Insert the new spring, taking care to fit the protruding flap of the spring into the slot on the pulley.



8) Insert the hub and hook the central spring lug onto the slot in the hub.



9) Screw the center screw inside the hub.



10) Insert the spring protection cover and tighten the four M4 screws.



11) Close the lids following the instructions in the appropriate paragraph.  
12) Load the spring according to the instructions in the spring paragraph.

**Disassembly of the hose reel spring only for round model**



**Before carrying out these operations, it is mandatory to discharge the force of the hose reel spring.**

Once the shells have been removed as indicated in the previous paragraph, proceed as follows.

5) Unscrew the four M4 screws holding the spring cover and remove it. Unwind the hose if necessary.



6) Unscrew the center screw inside the center hub, if present.



7) Remove the center hub.



8) Remove the extension spring.



Refitting the hose reel spring for round model only

7) Fit the new spring, taking care to insert its end into the slot in the pulley.



8) Fit the hub and hook the center spring lug to the hub slot.



9) Tighten the center screw inside the hub, if present.



10) Fit the spring cover and tighten the four M4 screws.



11) Close the shells according to the instructions in the relevant paragraph.  
12) Load the return spring according to the instructions in the relevant paragraph.