




## Water Drain Installation

1. Fit the blue O-ring securely into the black union nut.




2. The order in which the parts are attached to the straight pipe is as follows:



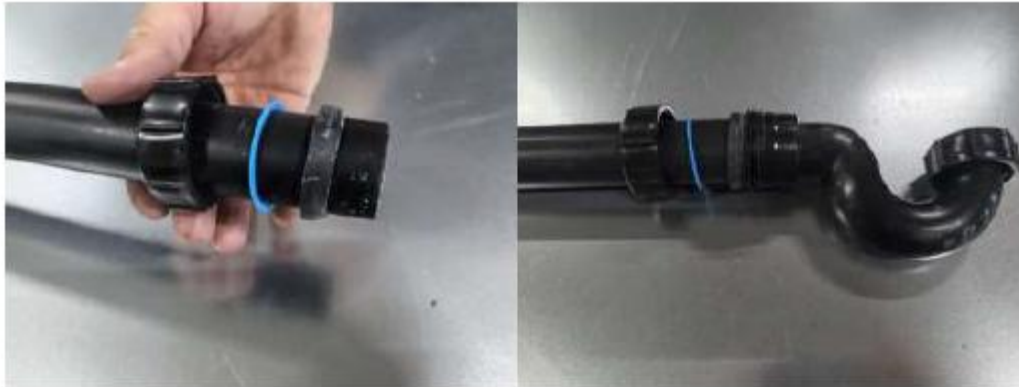

3. When installing the black gasket, pay attention to the conical side.

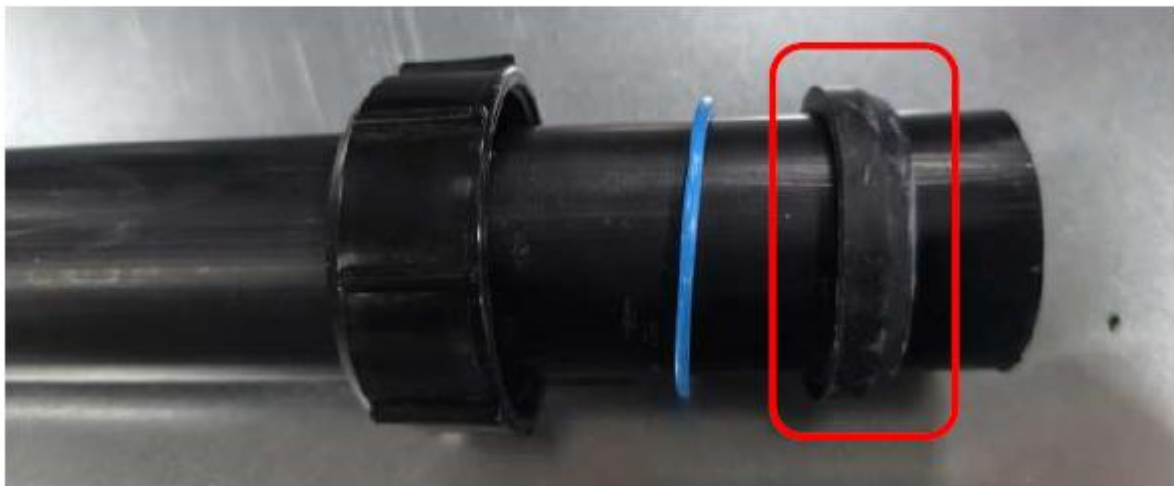

4. When the assembly of the first side is completed:



5. Assembly of the second side: (pipe elbow or T pipe)



6. The black O-ring must be fitted to the end of the pipe on the first side.



## 7. Mounting the pipe under the cabinet:

Twist the black union nut at end and attach it to the drain part in the cabinet. Do not overtighten the nut to prevent stripping the thread.



## 8. Types of assembly:

